

# SOLAR FOUNTAIN INSTALLATION INSTRUCTION

## F815

We hope you will find these instructions helpful in setting up your product.

Locate a flat, firm surface to place your fountain. Once you have found the perfect spot for your fountain, place the base upright in the desired area.



1) Connect the tube from the ball to the pump.



2) Put the bump on the bowl.



3) Put the ball on the base, the plug of LED and pump is ready.




4) The final product

### **Operating Instructions**

For complete operating instructions, please see the included manual.

1. Install the included batteries.
2. Attach the included stake to the panel.
3. Fully charge the unit with the included charging cable or a minimum of 6 hours of direct sunlight.
4. Plug two cord of the pump and LED to the corresponding socket on the panel.
5. Place the panel in a location where it will obtain consistent direct sunlight.
6. Fill the fountain with clean water.
7. Turn the device on by pressing the power button.
8. Toggle the device to the desired method of operation: Direct solar or Battery Power.

Direct Solar Power is the default method of operation. Battery Powered operation will work for a period of up to 4 hours with a full charge.

The final assembly should look like this. 



The pump must be fully submerged at all times to avoid pump burnout.

Product must be properly stored for winter.